


**1)** Ensure you have all components of the plug before beginning termination. Then strip outer sheath (approx 3cm).



**H divider**




**Insert**




**Plug Body**




**2)** Remove the plastic cruciform with flush cutters.

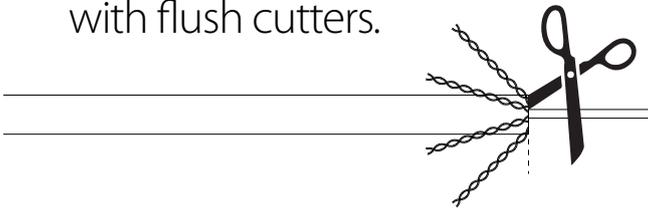


**3)** Insert the H divider according to the orientation of the cable. Arrange the correct wire map for T568B.

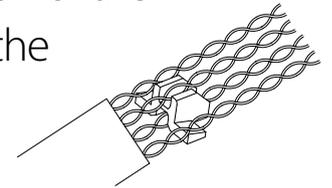


**4)** Untwist and straighten each conductor

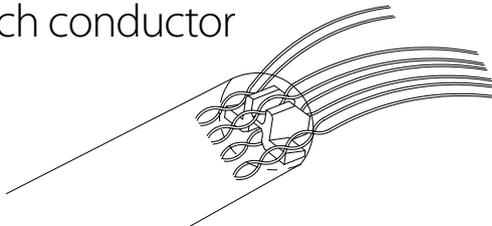

**5)** Trim the conductors (approx 10mm). Insert the conductors into the plastic guide.

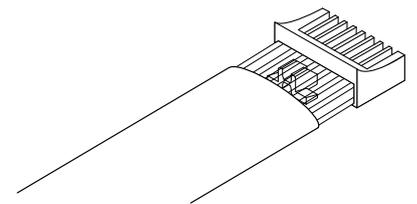

**6)** Insert the complete assembly into the plug.

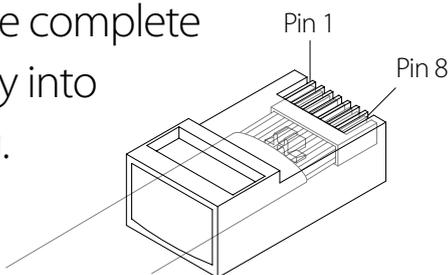

**7)** Finally insert the plug assembly into the crimp tool and crimp the plug to secure the cable.